


HIOKI メモリハイコーダ用ユニット MODULES FOR MEMORY HiCORDERS 取扱説明書 / Instruction Manual

Oct. 2021 Revised edition 10
8966A980-10 21-10H

JA/EN



* 6 0 0 2 1 3 7 5 A *

- 8966 アナログユニット
- 8967 温度ユニット
- 8968 高分解能ユニット
- U8969 ストレインユニット
- 8970 周波数ユニット
- 8971 電流ユニット
- 8972 DC/RMSユニット
- 8973 ロジックユニット
- U8974 高圧ユニット^{*1}
- U8975 4ch アナログユニット^{*4}
- U8976 高速アナログユニット
- U8977 3CH 電流ユニット^{*2,*4}
- U8978 4CH アナログユニット^{*2,*4}
- U8979 チャージユニット^{*2,*3}
- MR8990 デジタルボルトメータユニット
- U8991 デジタルボルトメータユニット
- U8793 任意波形発生ユニット^{*1,*5}
- MR8790 波形発生ユニット^{*1}
- MR8791 パルス発生ユニット^{*1}
- U8794 VIR発生ユニット

HIOKI

www.hioki.co.jp/

国内拠点


QRコード

編集・発行 日置電機株式会社 Printed in Japan

CE適合宣言は弊社ウェブサイトからダウンロードできます。
 ・本書の記載内容を予告なく変更することがあります。
 ・本書には著作権により保護される内容が含まれます。
 ・本書の内容を無断で転記・複製・改変することを禁止します。
 ・本書に記載されている会社名・商品名などは、各社の商標または登録商標です。

取扱説明書の最新版

取扱説明書の内容は、改善・仕様変更などのために変更する場合があります。
 最新版は、弊社ウェブサイトからダウンロードできます。
<https://www.hioki.co.jp/jp/support/download/>




メモリハイコーダをバージョンアップしてU8793, MR8790, MR8791を使用する場合、操作説明の取扱説明書は、弊社ホームページからダウンロードしてください。

このたびは、HIOKIメモリハイコーダ用ユニットをご選定いただき、誠にありがとうございます。
 使用上の注意、取り付け方法、仕様などの詳細は、メモリハイコーダ本体の取扱説明書をご覧ください。

ユニットの取り付け方

- 1 すべてのユニットの接続コードを外す
- 2 本体の電源を切って電源コードを抜く
- 3 ユニットの留めている2つのねじをプラスドライバー(No. 2)で緩める
- 4 2つの取っ手を持って、引き抜く
- 5 ユニットの向きに注意して、奥までしっかりと差し込む
- 6 ユニットの2つの固定ねじをプラスドライバーでしっかりと締める

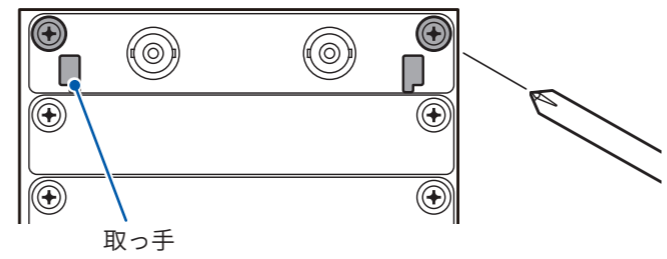

保証書 HIOKI

形名	製造番号	保証期間
		購入日 年 月から 3年間

お客様のご住所：〒
 お名前：
 お客様へのお願い
 ・保証書は再発行いたしませんので、大切に保管してください。
 ・「形名・製造番号・購入日」および「ご住所・お名前」をご記入ください。
 ※ご記入いただきました個人情報は修理サービスの提供および製品の紹介のみに使用します。

本製品は弊社の規格に従った検査に合格したことを証明します。本製品が故障した場合は、お買い求め先にご連絡ください。以下の保証内容に従い、本製品を修理または新品に交換します。ご連絡の際は、本書をご提示ください。

保証内容
 1. 保証期間中は、本製品が正常に動作することを保証します。保証期間は購入日から3年間です。購入日が不明な場合は、本製品の製造年月（製造番号の左4桁）から3年間を保証期間とします。
 2. 本製品にACアダプターが付属している場合、そのACアダプターの保証期間は購入日から1年間です。
 3. 測定値などの精度の保証期間は、製品仕様で別途規定しています。
 4. それぞれの保証期間内に本製品またはACアダプターが故障した場合、その故障の責任が弊社にあると弊社が判断したときは、本製品またはACアダプターを無償で修理または新品と交換します。
 5. 以下の故障、損傷などは、無償修理または新品交換の保証の対象外とします。
 -1. 消耗品、有寿命部品などの故障と損傷
 -2. コネクタ、ケーブルなどの故障と損傷
 -3. お買い上げ後の輸送、落下、移動などによる故障と損傷
 -4. 取扱説明書、本体注意ラベル、刻印などに記載された内容に反する不適切な取り扱いによる故障と損傷
 -5. 法令、取扱説明書などで要求された保守・点検を怠ったことにより発生した故障と損傷
 -6. 火災、風水害、地震、落雷、電源の異常（電圧、周波数など）、戦争・暴動、放射能汚染、そのほかの不可抗力による故障と損傷
 -7. 外観の損傷（筐体の傷、変形、退色など）
 -8. そのほかその責任が弊社にあるとみなされない故障と損傷
 6. 以下の場合には、本製品を保証の対象外とします。修理、校正などもお断りします。
 -1. 弊社以外の企業、機関、もしくは個人が本製品を修理した場合、または改造した場合
 -2. 特殊な用途（宇宙用、航空用、原子力用、医療用、車両制御用など）の機器に本製品を組み込んで使用することを、事前に弊社にご連絡いただかない場合
 7. 製品を使用したことにより発生した損失に対しては、その損失の責任が弊社にあると弊社が判断した場合、本製品の購入金額までを補償します。ただし、以下の損失に対しては補償しません。
 -1. 本製品を使用したことにより発生した被測定物の損傷に起因する二次的な損害
 -2. 本製品による測定の結果に起因する損害
 -3. 本製品と互いに接続した（ネットワーク経由の接続を含む）本製品以外の機器への損害
 8. 製造後一定期間を経過した製品、および部品の生産中止、不測の事態の発生などにより修理できない製品は、修理、校正などをお断りすることがあります。

年月日	サービス内容

日置電機株式会社
<https://www.hioki.co.jp/>
 18-06 JA-3

対応機種一覧

✓：使用可能 -：使用不可

対応機種 ユニット	8847	MR8847-01 MR8847-02 MR8847-03	MR8847A (MR8847-51, MR8847-52, MR8847-53)	MR8740 MR8741	MR8827	MR6000 MR6000-01	MR8740T (MR8740-50)
8966	✓	✓	✓	✓	✓	✓	✓
8967	✓	✓	✓	✓	✓	✓	✓
8968	✓	✓	✓	✓	✓	✓	✓
U8969	✓	✓	✓	✓	✓	✓	✓
8970	✓	✓	✓	✓	✓	✓	✓
8971	✓	✓	✓	(MR8741は不可)	✓	✓	✓
8972	✓	✓	✓	✓	✓	✓	✓
8973	✓	✓	✓	✓	✓	✓	✓
U8974	✓	✓	✓	✓	✓	✓	✓
U8975	-	-	✓	-	-	✓	✓
U8976	-	-	-	-	-	✓	-
U8977	-	-	✓	-	-	✓	✓
U8978	-	-	✓	-	-	✓	✓
U8979	-	-	✓	✓	✓	✓	✓
MR8990	-	-	✓	✓	✓	✓	✓
U8991	-	-	-	-	-	-	✓
U8793	-	-	✓	✓	✓	✓	✓
MR8790	-	-	✓	✓	✓	-	✓
MR8791	-	-	✓	✓	✓	-	✓
U8794	-	-	-	-	-	-	✓

対応バージョン

- *1 8847, MR8847-01, MR8847-02, MR8847-03
 MR8740
 MR8741
 MR8827
 Ver. 3.20 以降
 Ver. 3.20 以降
 Ver. 2.20 以降
 Ver. 1.10 以降
- *2 MR6000, MR6000-01
 MR8740T
 Ver. 2.10 以降
 Ver. 2.00 以降
- *3 MR8827
 MR8847A
 MR8740
 MR8741
 Ver. 1.20 以降
 Ver. 1.10 以降
 Ver. 3.30 以降
 Ver. 2.30 以降
- *4 MR8847A
 Ver. 2.00 以降
- *5 MR6000, MR6000-01
 MR8740T
 Ver. 3.50 以降
 Ver. 3.00 以降

MODULES FOR MEMORY HiCORDERS

Instruction Manual

Oct. 2021 Revised edition 10
8966A980-10 21-10H

EN

8966	ANALOG UNIT
8967	TEMP UNIT
8968	HIGH RESOLUTION UNIT
U8969	STRAIN UNIT
8970	FREQ UNIT
8971	CURRENT UNIT
8972	DC/RMS UNIT
8973	LOGIC UNIT
U8974	HIGH VOLTAGE UNIT*1
U8975	4CH ANALOG UNIT*4
U8976	HIGH SPEED ANALOG UNIT
U8977	3CH CURRENT UNIT*2,*4
U8978	4CH ANALOG UNIT*2,*4
U8979	CHARGE UNIT*2,*3
MR8990	DIGITAL VOLTMETER UNIT
U8991	DIGITAL VOLTMETER UNIT
U8793	ARBITRARY WAVEFORM GENERATOR UNIT*1,*5
MR8790	WAVEFORM GENERATOR UNIT*1
MR8791	PULSE GENERATOR UNIT*1
U8794	VIR GENERATOR UNIT

HIOKI

www.hioki.com/



All regional contact information

HEADQUARTERS
81 Koizumi
Ueda, Nagano 386-1192 Japan

HIOKI EUROPE GmbH
Rudolf-Diesel-Strasse 5
65760 Eschborn, Germany
hioki@hioki.eu

2103 EN

Edited and published by HIOKI E.E. CORPORATION

Printed in Japan

- CE declarations of conformity can be downloaded from our website.
- Contents subject to change without notice.
- This document contains copyrighted content.
- It is prohibited to copy, reproduce, or modify the content of this document without permission.
- Company names, product names, etc. mentioned in this document are trademarks or registered trademarks of their respective companies.

Latest instruction manual

The contents of this manual are subject to change, for example as a result of product improvements or changes to specifications.

The latest edition can be downloaded from Hioki's website.

<https://www.hioki.com/global/support/download>




If you wish to update the Memory HiCorder to use the U8793, MR8790, or MR8791, visit our website to download a corresponding file.

Thank you for purchasing the module designed for use with Hioki's Memory HiCorder. For more detailed information about operating precautions, module installation, and specifications, please see the instruction manual that came with the Memory HiCorder.

Installing the Modules

- 1 Remove the connection cords from all modules.
- 2 Turn off the instrument, and disconnect the power cord.
- 3 Remove the two fixing screws with a Phillips screwdriver (No. 2).
- 4 Pinch the two knobs and pull out the module.
- 5 Orient the module and insert it all the way into the instrument.
- 6 Tighten the two module mounting screws with the Phillips screwdriver.

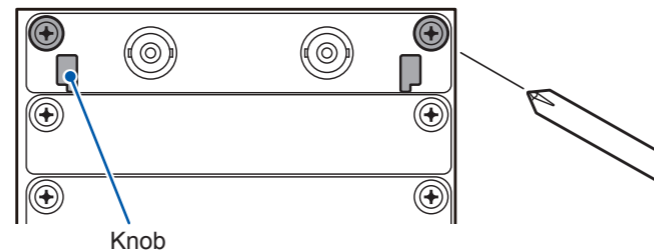

Warranty Certificate			HIOKI
Model	Serial number	Warranty period	
		Three (3) years from date of purchase (___ / ___)	
Customer name: _____			
Customer address: _____			
Important			
<ul style="list-style-type: none"> • Please retain this warranty certificate. Duplicates cannot be reissued. • Complete the certificate with the model number, serial number, and date of purchase, along with your name and address. The personal information you provide on this form will only be used to provide repair service and information about Hioki products and services. 			
This document certifies that the product has been inspected and verified to conform to Hioki's standards. Please contact the place of purchase in the event of a malfunction and provide this document, in which case Hioki will repair or replace the product subject to the warranty terms described below.			
Warranty terms			
1. The product is guaranteed to operate properly during the warranty period (three [3] years from the date of purchase). If the date of purchase is unknown, the warranty period is defined as three (3) years from the date (month and year) of manufacture (as indicated by the first four digits of the serial number in YYMM format).			
2. If the product came with an AC adapter, the adapter is warranted for one (1) year from the date of purchase.			
3. The accuracy of measured values and other data generated by the product is guaranteed as described in the product specifications.			
4. In the event that the product or AC adapter malfunctions during its respective warranty period due to a defect of workmanship or materials, Hioki will repair or replace the product or AC adapter free of charge.			
5. The following malfunctions and issues are not covered by the warranty and as such are not subject to free repair or replacement: <ul style="list-style-type: none"> -1. Malfunctions or damage of consumables, parts with a defined service life, etc. -2. Malfunctions or damage of connectors, cables, etc. -3. Malfunctions or damage caused by shipment, dropping, relocation, etc., after purchase of the product -4. Malfunctions or damage caused by inappropriate handling that violates information found in the instruction manual or on precautionary labeling on the product itself -5. Malfunctions or damage caused by a failure to perform maintenance or inspections as required by law or recommended in the instruction manual -6. Malfunctions or damage caused by fire, storms or flooding, earthquakes, lightning, power anomalies (involving voltage, frequency, etc.), war or unrest, contamination with radiation, or other acts of God -7. Damage that is limited to the product's appearance (cosmetic blemishes, deformation of enclosure shape, fading of color, etc.) -8. Other malfunctions or damage for which Hioki is not responsible 			
6. The warranty will be considered invalidated in the following circumstances, in which case Hioki will be unable to perform service such as repair or calibration: <ul style="list-style-type: none"> -1. If the product has been repaired or modified by a company, entity, or individual other than Hioki -2. If the product has been embedded in another piece of equipment for use in a special application (aerospace, nuclear power, medical use, vehicle control, etc.) without Hioki's having received prior notice 			
7. If you experience a loss caused by use of the product and Hioki determines that it is responsible for the underlying issue, Hioki will provide compensation in an amount not to exceed the purchase price, with the following exceptions: <ul style="list-style-type: none"> -1. Secondary damage arising from damage to a measured device or component that was caused by use of the product -2. Damage arising from measurement results provided by the product -3. Damage to a device other than the product that was sustained when connecting the device to the product (including via network connections) 			
8. Hioki reserves the right to decline to perform repair, calibration, or other service for products for which a certain amount of time has passed since their manufacture, products whose parts have been discontinued, and products that cannot be repaired due to unforeseen circumstances.			
HIOKI E.E. CORPORATION http://www.hioki.com			18-07 EN-3

Memory HiCorders that support the modules

✓ : supported - : not supported

Memory HiCorders	8847	MR8847-01 MR8847-02 MR8847-03	MR8847A (MR8847-51, MR8847-52, MR8847-53)	MR8740 MR8741	MR8827	MR6000 MR6000-01	MR8740T (MR8740-50)
8966	✓	✓	✓	✓	✓	✓	✓
8967	✓	✓	✓	✓	✓	✓	✓
8968	✓	✓	✓	✓	✓	✓	✓
U8969	✓	✓	✓	✓	✓	✓	✓
8970	✓	✓	✓	✓	✓	✓	✓
8971	✓	✓	✓	(Cannot be used with MR8741)	✓	✓	✓
8972	✓	✓	✓	✓	✓	✓	✓
8973	✓	✓	✓	✓	✓	✓	✓
U8974	✓	✓	✓	✓	✓	✓	✓
U8975	-	-	✓	-	-	✓	✓
U8976	-	-	-	-	-	✓	-
U8977	-	-	✓	-	-	✓	✓
U8978	-	-	✓	-	-	✓	✓
U8979	-	-	✓	✓	✓	✓	✓
MR8990	-	-	✓	✓	✓	✓	✓
U8991	-	-	-	-	-	-	✓
U8793	-	-	✓	✓	✓	✓	✓
MR8790	-	-	✓	✓	✓	-	✓
MR8791	-	-	✓	✓	✓	-	✓
U8794	-	-	-	-	-	-	✓

Supporting firmware version

*1	8847, MR8847-01, MR8847-02, MR8847-03 MR8740 MR8741 MR8827	Version 3.20 or latter Version 3.20 or latter Version 2.20 or latter Version 1.10 or latter
*2	MR6000, MR6000-01 MR8740T	Version 2.10 or latter Version 2.00 or latter
*3	MR8827 MR8847A MR8740 MR8741	Version 1.20 or latter Version 1.10 or latter Version 3.30 or latter Version 2.30 or latter
*4	MR8847A	Version 2.00 or latter
*5	MR6000, MR6000-01 MR8740T	Version 3.50 or latter Version 3.00 or latter